



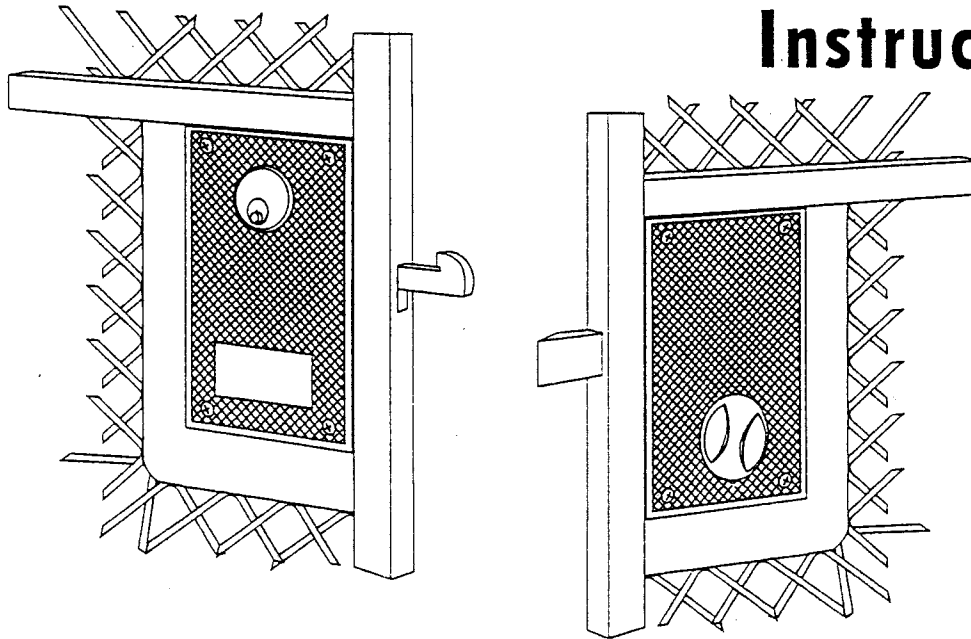

# Reversible Gate Lock Instructions



US Patent #4,875,725 "No fall out" feature.  
Parts will not fall out when cover is removed.

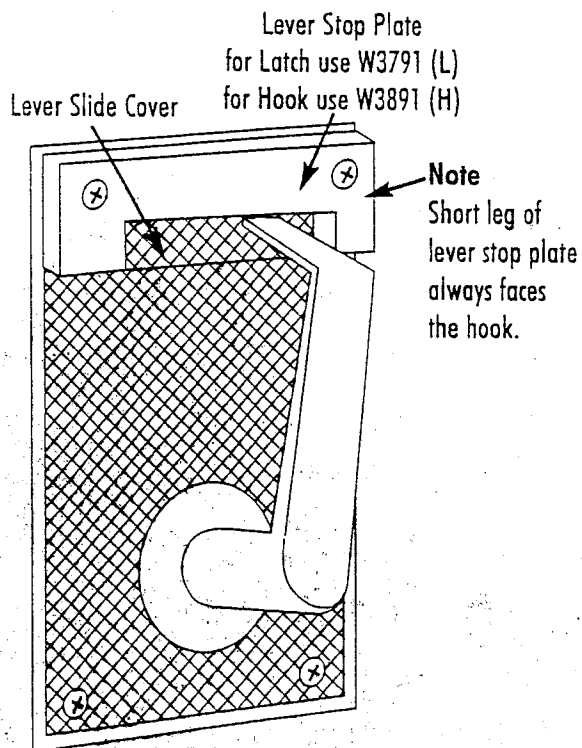

## To Install Interior Lever

1. Place spring over post and engage fork as shown in "How to Assemble" section.
2. Attach lever assembly in cover and fasten with two screws.
3. Assemble case in lock frame and attach interior lever-cover assembly.
4. Attach plastic lever slide cover and lever stop plate with top two screws. Use plate marked "L" for latches or plate marked "H" for hooks.

# How to Assemble Hook & Latch Gate Locks

## SPECIAL FEATURE

If assembled properly, all parts will remain in position when lock is inverted.

### HOOK

#### Assembly


Thread cylinder completely into case. With cam in vertical position, tighten cylinder set with a screw.

While compressing spring on hook assembly, place over either post for left or right handing.

Washer fits in the recess of the cradle when the spring is released. Position the fork as shown so that it's movement retracts hook.

#### To Reverse

Compress spring on hook assembly and lift out. Re-insert on opposite post.

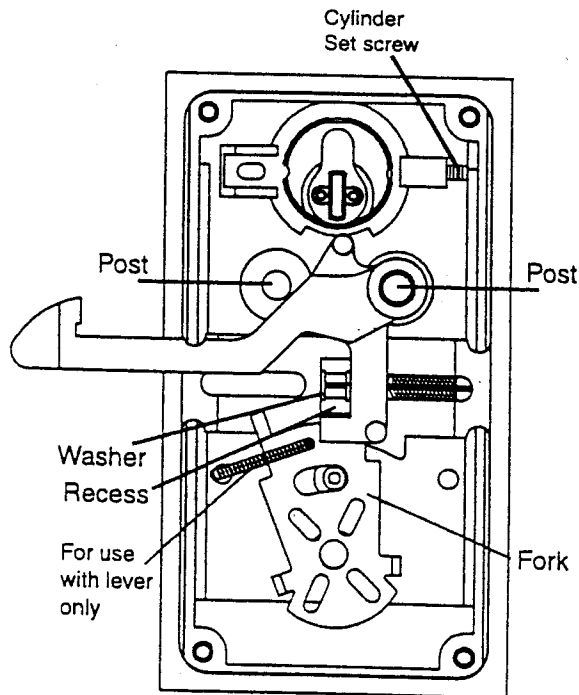

### LATCH

#### Assembly

Thread cylinder completely into case. With cam in vertical position, tighten cylinder set with a screw.


Engage latch lever with pin on latch adapter and place over either post.

Note: Notched end of latch lever must be on outside leg of fork. Retract washer on latch rod to compress spring. Place in cradle so end of latch stop overlaps edge of latch lever. Washer must fit in recess of cradle when spring is released. Face latch nose in desired direction for swing of door.

#### To Reverse

Compress spring on latch assembly and lift out. Re-position latch lever and latch adapter on opposite post.

Re-insert latch in opposite direction.

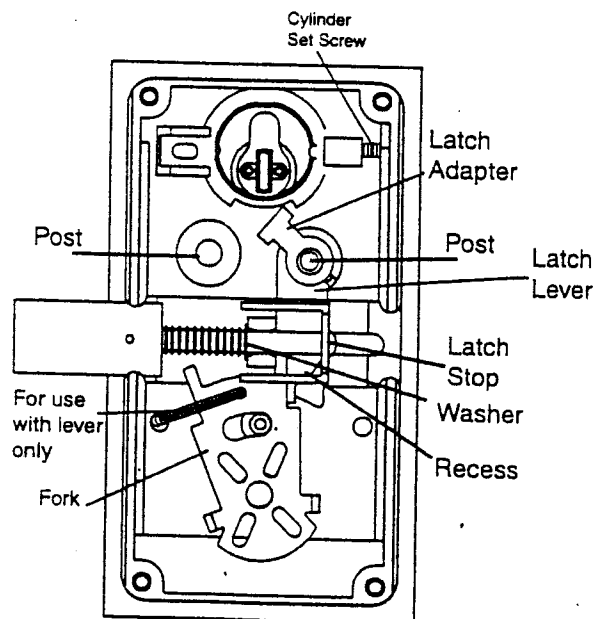

# How to Install

## Single & Double Cylinder Models

Figure 3

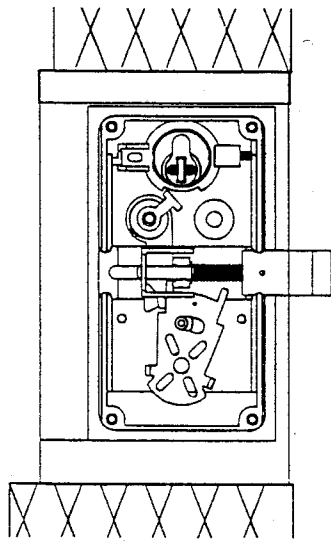


Figure 4


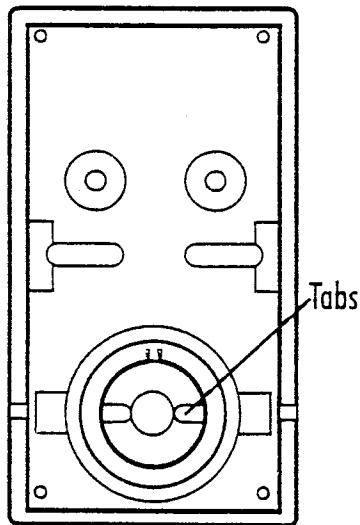


Figure 5

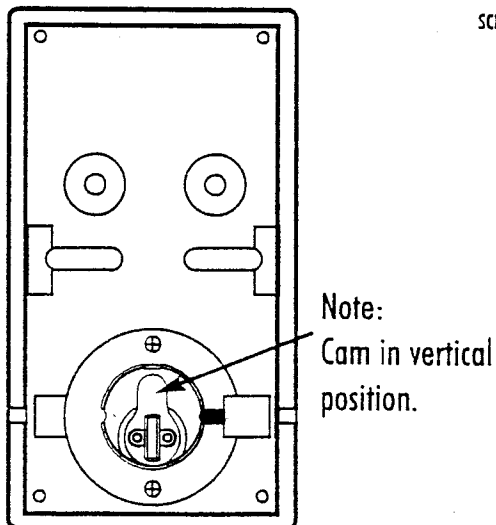

### To Install

Insert assembled case from outside into lock frame of gate. (See Figure 3)

#### Single Cylinder Models


From inside, place cover over case. Engage thumb-piece tabs with slots in fork. (See Figure 4) Test thumb turn operation.

Insert and tighten case screws.


#### Double Cylinder Models

1. Screw cylinder completely into double cylinder collar and tighten cylinder set screw.
2. Install cylinder/collar assembly in cover and fasten with 2 screws. Cam should be in vertical position as shown in Figure 5.
3. From inside, place cover over case. Tighten case screws.

# Gate Lock Parts

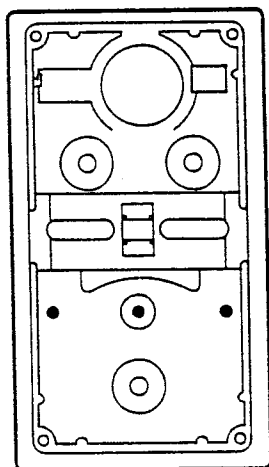


W3703  
Case

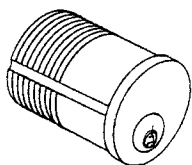


2122  
Cylinder




5051 Cylinder Set Screw  
8-32  
Allen head

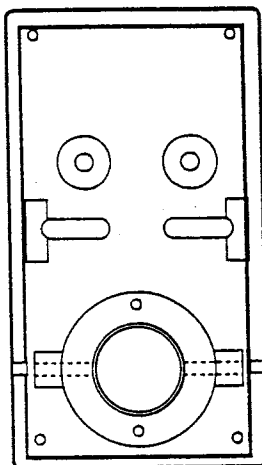


W3701  
Cover

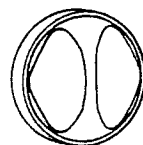


W3708  
Turnpiece

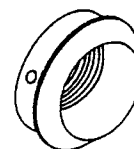


W3751  
Double Cylinder  
Collar  
with set screw

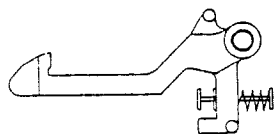


WA3806 to W3836  
Hook Assembly

 


WA3715 to WA3745  
Latch Assembly

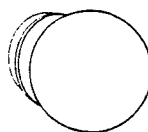

WA9253  
Interior Knob Assembly

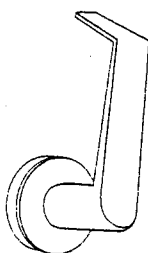


WA9293  
Interior Lever Assembly  
Use with W3791 or W3891

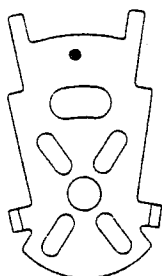


W3704  
Fork




W3705  
Latch Lever

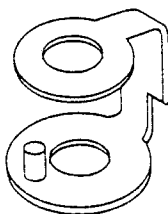


WA3706  
Latch Adapter

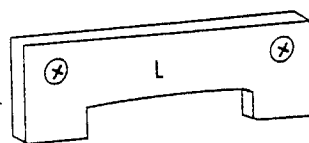

W3791 Lever Stop Plate (latch)

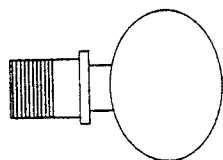


WA9251  
Exterior Knob

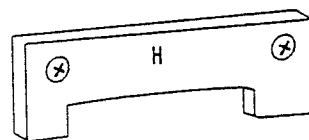


W3891 Lever Stop Plate (hook)



 9005  
Case Screws



1083  
Retainer/Fork Screw

 

W3892 Lever Slide Cover